



* Dante® Tips & Tricks

[promedias AG - professional media systems. Support](#)




[promedias AG - professional media systems. Dante](#)

Dante - Netzwerkeinstellungen

Prüfe ob Gemeinsame Dante-Schnittstelle verwenden „Used shared Dante interface“ aktiviert ist:

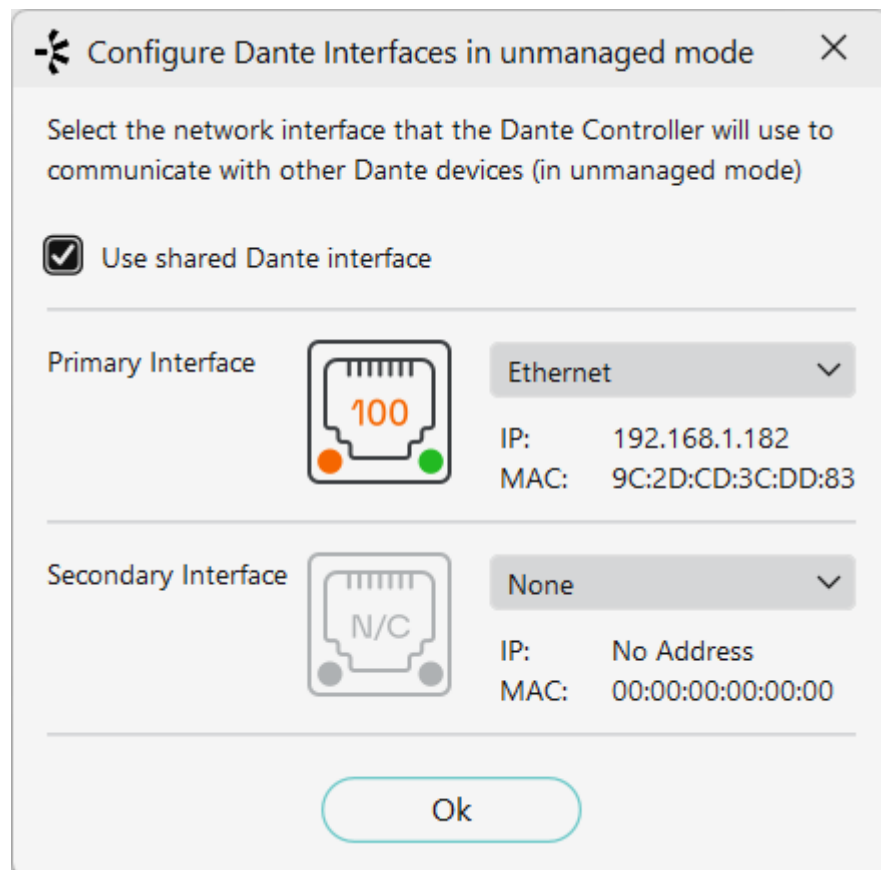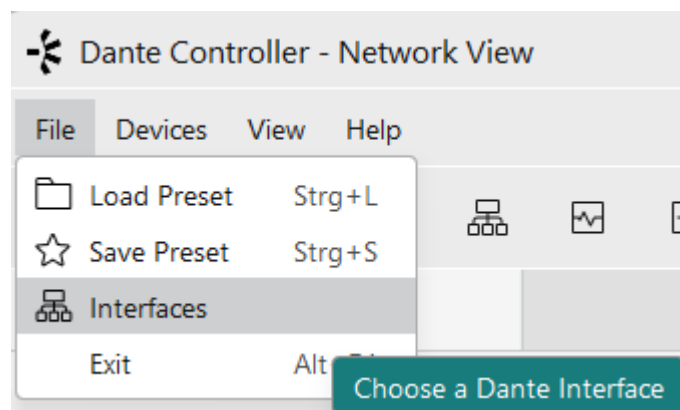

Bevor die Subscription(s) angepasst/überschrieben wird/werden, soll ein Backup „Preset“ erstellt werden:

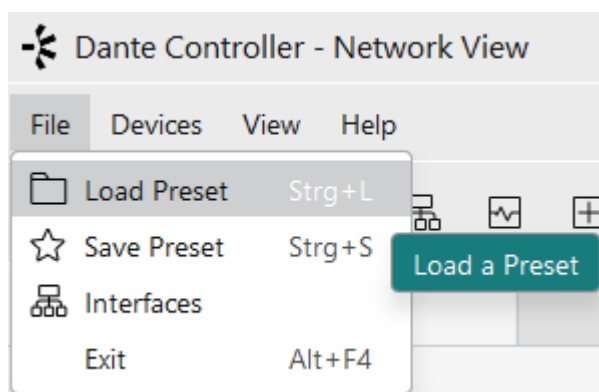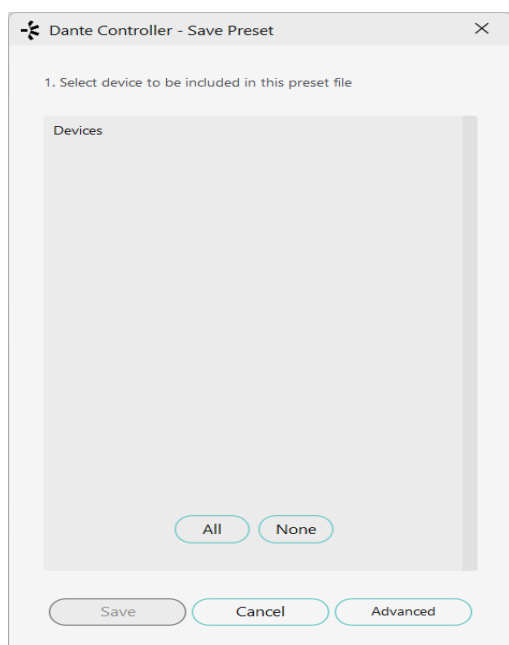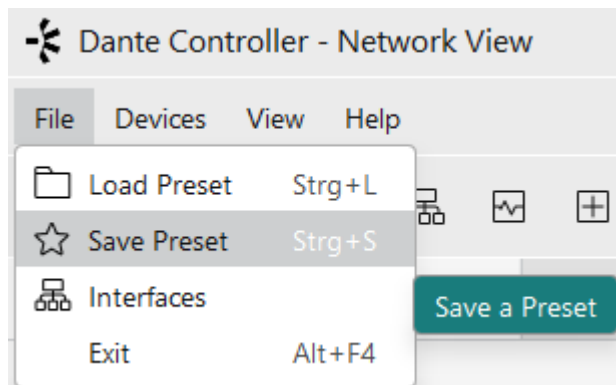

Dante-AVIO Install - LED-Funktionen

Dante AVIO Install LED Functions



The LED on the adapter's top indicates various states, as shown below.

Device State	LED Indication	Comment
Off	OFF	No Power
Device Is Booting	OFF	
Acquiring Clock Sync	Blinking Green	
PTP Error	Solid Red	
PTP Follower	Solid GREEN	Normal Operation
PTP Leader	Solid BLUE	Normal Operation
Identify	Blinking White	Blinking for 6 seconds (cycle every 0.5 seconds)
Failsafe (bootloader)	Blinking RED	Failsafe, corrupt capability (red device name in Dante Controller)
Upgrade (bootloader)	Blinking ORANGE	Device is upgrading

Dante AVIO Adapter LED Functions



The LEDs on the adapter's Ethernet port indicate various states as shown below.

Device State	Left LED	Right LED	Comment
Off	OFF	OFF	No Power
Device Is Booting	Solid Green	Solid Red	
Acquiring Clock Sync/ Runtime Error	Blinking Green	Blinking Red	Normal Operation
PTP Follower	Blinking Green	Solid Green	Normal Operation
PTO Leader	Blinking Green	Blinking Green	Normal Operation
Identify	Alternating RED and GREEN	Alternating RED and GREEN	Blinking for 6 seconds (cycle every 0.5 seconds)
Failsafe (bootloader)	Blinking RED	Blinking RED	Failsafe, corrupt capability (red device name in Dante Controller)
Upgrade (bootloader)	Blinking ORANGE	Blinking ORANGE	Device is upgrading
Network Cable Disconnected	Solid GREEN	Solid GREEN	USB adapter only, on USB power

Note: Left and right refer to the LEDs when the adapter is face-up, and you are looking at the RJ45 connector as shown below.

